

**C Chubb**



**Fitting and  
Operating Guide**


**Automatic  
fire door.  
Keep clear.  
Close at  
night.**

**To manually release:  
Push door away from you or  
kick black knob towards door.**

**C Chubb**


**Technical support: 0800 32 1666**

# Dorgard Operation and Self Test

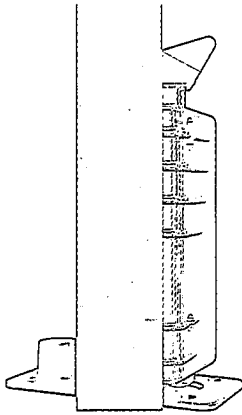

## To hold the door open:

1. Open the door to the required position.
2. Stand sideways to the door.
3. Depress the Plunger down using your foot. Greater foot pressure may be needed depending upon the force from the door closer or the type of floor surface
4. Whilst depressing the Plunger, push/pull the door gently in the direction of closing.
5. Remove your foot and let go of the door.

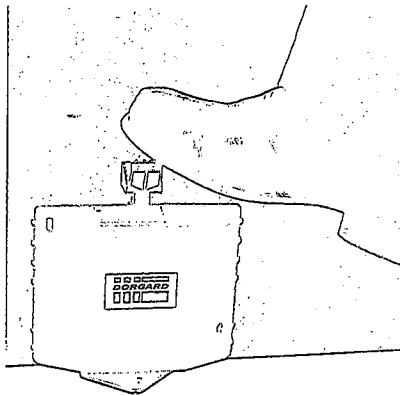


## To release Dorgard, either:

- A. Lightly tap the Plunger towards the fire door with your foot.

or;

- B. Push the door in the direction of opening.

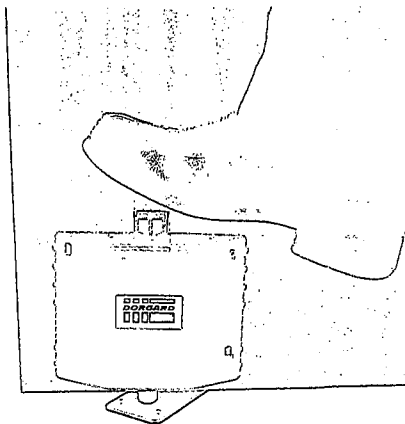

**Note. If the door has been pushed hard against the Floorplate Bump Stop or a wall, then Dorgard will only release by method A.**

## Self Test:

Dorgard conducts weekly Self Tests 12 hours after Battery installation and then every 7 days after that. During the Self Test, if the fire door is being retained, Dorgard will release the door. Should Dorgard detect an internal fault it will sound a warning tone and Fail to Safe.

